

- Knob-adjustable from .03-10 minutes.
- Works with anticipator thermostats.

## INSTALLATION Step-by-step

1. Disconnect power.
2. Connect terminals in series with the starting device as shown in the system diagram below.
3. For 24 VAC circuits, apply control as packaged. For 120/240 VAC circuits, cut the jumper wire.
4. Select the desired time delay.
5. Reapply power, check operation.

## SPECIFICATIONS

### Input

- Line Voltage: 18-240 VAC/VDC
- Line Frequency: 50/60 Hz

### Output


- Output Ratings:
  - Maximum: 1.5 amps
  - Minimum: 40 ma
  - Inrush: 15 amps

Time Delay: .03-10 mins. adjustable

## MODE OF OPERATION

When application of power, the load is energized. When the thermostat opens or there is a loss of power, the load is de-energized and the delay period begins. The compressor will not start again during the delay period. The ICM203 provides true thermostat interruption protection, even in the presence of a trickle current.

## TIMING DIAGRAM

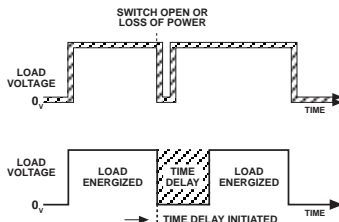

## SYSTEM DIAGRAM

