




**CONFIGURATION**

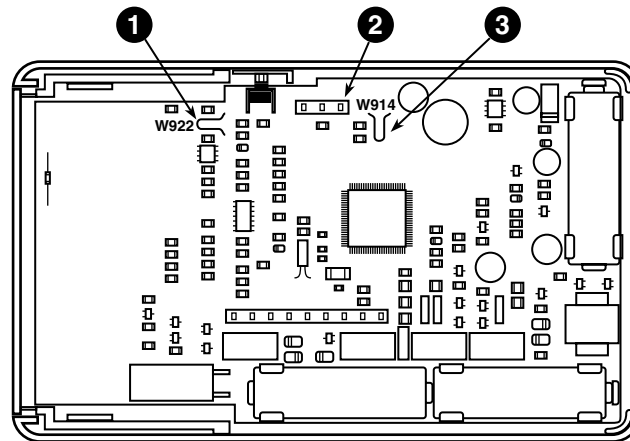

**Jumper Locations**

- ❶ Clip for remote sense
- ❷ 3-pin connector
- ❸ Clip for electric heat

**Customizing Your Comfort-Set 90 Thermostat**

The following table allows you to customize the options on your Comfort-Set 90 thermostat. Begin by pressing simultaneously the two buttons in step 1.

-391 Step	-371 Step	Press Button(s)	Displayed (Factory Default)	Press  or  to select:	COMMENTS
N/A	1	<b>TIME</b> and <b>TIME</b>	PROG MODE (5 2)	5 1 1	Selects program mode (5+2 Day or 5+1+1 Day) <b>1F90 ONLY.</b>
1	2	<b>TIME</b>	EMR (ON)	OFF	Selects EMR option ON or OFF
2	3	<b>TIME</b>	SET CYCL HEAT (05)	02 - 40	Adjusts heat anticipation value (2 through 40)
3	4	<b>TIME</b>	SET CYCL COOL (14)	09 - 40	Adjusts cool anticipation value (9 through 40)
4	5	<b>TIME</b>	COOL FAN DELA OFF (01)	01 - 127	Adjusts cool fan-off delay (1 through 127 sec.)
5	6	<b>TIME</b>	COOL FAN DELA ON (04)	01 - 05	Adjusts cool fan-on delay (1 through 5 sec.)
6	7	<b>TIME</b>	COMP LOCK (ON)	OFF	Selects compressor lockout ON or OFF (see NOTE)
7	8	<b>TIME</b>	SYSTEM (HEAT-OFF-COOL-AUTO)	HEAT-OFF, COOL-OFF, HEAT-OFF-COOL	Selects system switch choices for heat only, cool only, heat/cool or automatic changeover
8	9	<b>TIME</b>	0 F (0)	5 LO to 5 HI	Adjusts temperature display higher or lower
9	10	<b>TIME</b>	( F)	C	Adjusts temperature display to F or C
10	11	<b>TIME</b>	BEEP (ON)	OFF	Turns beeper ON or OFF
11	12	<b>TIME</b>	REMT SEN (OFF)	ON	Selects remote sensor OFF or ON
12	13	<b>TIME</b>	PART LOCK (OFF)	ON	Selects partial keypad lockout OFF or ON
13	14	<b>TIME</b>	LOCK (OFF)	ON	Selects total keypad lockout OFF or ON
14	N/A	<b>TIME</b>	RH	20 LO to 20 HI	Adjusts humidity display higher or lower
15	N/A	<b>TIME</b>	DRY (0)	HI - LO	Selects programmable automatic humidity reduction
16	15	<b>PROGRAM</b>			Returns to normal operation

**NOTE:** COMP LOCK OFF permanently defeats compressor lockout. Turn this feature off only if the system already provides for compressor short-cycle protection